

# **Document Number & Revision**

DSND2034ZD25

# **Description** Rechargeable Smart Lithium Ion Battery Pack

# Inspired Energy Part Number For Battery

ND2034ZD25

# Statement Of Confidentiality

The information contained within this document is confidential and proprietary to Inspired Energy. This information should not, in whole or in part, be reproduced, disclosed or used except as expressly and duly authorized by Inspired Energy.

This information is descriptive only. No representation, guarantee or warranty of merchantability or fitness for purpose is made or implied. Specifications are subject to change without notice.



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

## TABLE OF CONTENTS

1.	REVIS	ION HISTORY	4
2.	INTRO	DUCTION	4
-	2.1. SC	OPE	1
		TTERY PACK OVERVIEW	
		ENERAL PRECAUTIONS	
4	2.3.1.	Handling	
	2.3.2.	Charge & Discharge	
	2.3.3.	Storage	
	2.3.4.	Disposal	
•			
3.	-	REMENTS	
		NERAL REQUIREMENTS	
	3.1.1.	Nominal Voltage	
	3.1.2.	Rated Capacity	
	3.1.3.	Initial Impedance	
	3.1.4.	Discharge -30C to +60C	
	3.1.5.	Charge 0C to 45C	
	3.1.6.	Storage	
	3.1.7.	Terminal Specifications	
2	3.2. Fu	EL-GAUGE ELECTRONICS	
	3.2.1.	Overview Of Operation	8
	3.2.2.	DC Specifications	
	3.2.3.	Measurement Accuracy	
	3.2.3.	6	
	3.2.3.	1	
	3.2.3.		
	3.2.4.	LCD Indication	
-		IBUS AND SBD PARAMETERS	
	3.3.1.	Overview Of Operations	
	3.3.2.	SMBus Logic Levels	
	3.3.3.	SMBus Data Protocols	
	3.3.4.	SMBus Host-to-Battery Message Protocol	
	3.3.4.		
	3.3.4.		
	3.3.4.		
	3.3.5.	SMBus Battery-to-Charger Message Protocol	
	3.3.6.	SMBus Battery Critical Message Protocol	
	3.3.7.	Host To Battery Messages (Slave Mode)	
	3.3.8.	Battery To Charger Messages (Master Mode)	
	3.3.9.	Critical Messages (Master Mode)	
	3.3.10.	Pack Calibration Cycle	
		OTECTION ELECTRONICS	
	3.4.1.	Overview Of Operation	
	3.4.2.	Charge Protection	
	3.4.3.	Discharge Protection	



# Specification NumberDSND2034ZD25Specification Revision1.1Prepared ByRAHIssue date1/27/16

# **Battery Specification**

3.4	.4.	Short-Circuit Protection	18
3.5.	PASS	IVE SAFETY PROTECTION	19
3.5.	.1.	Overview Of Operation	19
3.5.	.2.	Thermal Fuse	19
3.5	.3.	Slow-Blow Current Fuse (Logic Fuse)	19
3.6.		HANICAL SPECIFICATIONS	
3.6	.1.	Weight	19
3.6	.2.	Mating Connector	19
3.6	.3.	Date Code/Serial Number	19
3.6	.4.	Packaging	20
3.6	.5.	Mechanical Drawing	21
3.7.	Envi	RONMENTAL/SAFETY SPECIFICATIONS	23
3.7	.1.	EMC And Safety	23
3.8.		ABILITY	
3.8		Life Expectancy	
3.8	.2.	Warranty	23
3.8	.3.	Warranty Shelf Life	23



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 1. **REVISION HISTORY**

Revision	Release	Revisions	Issued	Approved By
	Date		Ву	
1.0	5/7/15	Release.	RAH	DB, LJ
1.1	1/27/16	Changed shipping s-o-c	LJ	LJ

# 2. INTRODUCTION

## 2.1. Scope


This specification describes the physical, functional and electrical characteristics of a rechargeable Lithium Ion battery pack supplied by Inspired Energy. This specification is the interface document between Inspired Energy and it's customers. It is understood that the customer may create their own internal specification. However, this specification is the master that defines the battery's operation. Battery packs produced will meet this specification.

# 2.2. Battery Pack Overview

This specification describes the physical, functional and electrical requirements for the ND2034ZD25 Smart Battery including a rechargeable Lithium Ion battery and a Battery Management Module. The battery consists of (4) Lithium Ion rechargeable cells of 18650 size, assembled in a 4 series / 1 parallel (4S 1P) configuration. Each cell has an average voltage of 3.6V and a typical capacity of 2.5Ah giving a battery pack of 14.4V and 2.5Ah typical.

The battery is capable of communicating with host or the charger through the System Management Bus (SMBus). The battery is fully SMBus and SBDS Revision 1.1compliant. Protection is provided for over-charge, over-discharge and short circuit. For redundancy, passive safety devices have been integrated into the pack to protect against over-current and over-temperature, and secondary over-voltage has been implemented with a logic-fuse and controller.

The battery pack comprises the individual elements as shown below.

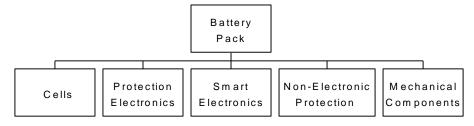



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 2.3. General Precautions

## 2.3.1. Handling

- Avoid shorting the battery
- Do not immerse in water.
- Do not disassemble or deform the battery
- Do not expose to, or dispose of the battery in fire.
- Avoid excessive physical shock or vibration.
- Keep out of the reach of children.
- Never use a battery that appears to have suffered abuse.

# 2.3.2. Charge & Discharge

- Battery must be charged in appropriate charger only.
- Never use a modified or damaged charger.
- Specified product use only.

## 2.3.3. Storage

• Store in a cool, dry and well-ventilated area.

## 2.3.4. Disposal

• Regulations vary for different countries. Dispose of in accordance with local regulations.

## 3. **REQUIREMENTS**

## 3.1. General Requirements

## 3.1.1. Nominal Voltage

The battery nominal operating voltage is 14.4V.

## 3.1.2. Rated Capacity

The initial capacity is  $\ge 2375$ mAh (based on a CV charge of  $16.8V \pm 50$ mV with a current limit of 1500mA and a 410mA discharge to 10.00V @ 25C, within 1 hour of charge).



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.1.3. Initial Impedance


The internal impedance of a fully charged battery shall be  $< 150 \text{m}\Omega$  when measured across the positive and negative battery terminals at 1kHz at 20°C.

# 3.1.4. Discharge -30C to +60C

Discharge Temperature Limits: As shown below,  $\leq 80\%$  RH

The battery shall be capable of continuous discharge within the Operating Boundary as shown in the graph below.

Host devices should be designed for a controlled shutdown following battery notification of termination by the battery sending TERMINATE\_DISCHARGE alarm, prior to protection circuit cut-off.

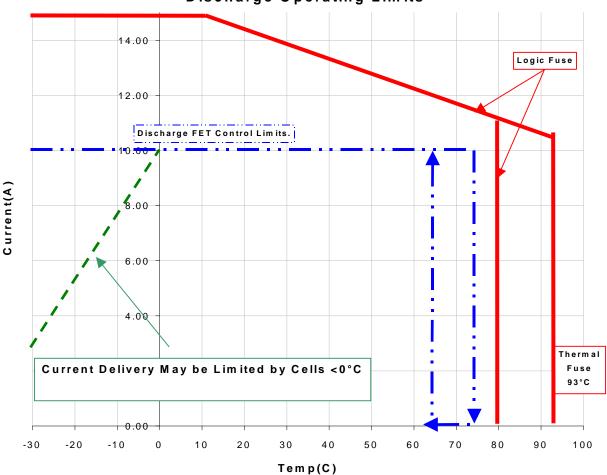

**Discharge Operating Limits** 




Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.1.5. Charge 0C to 45C

Charge Temperature Limits: As Shown below,  $\leq 80\%$  RH

The battery shall be capable of continuous charge at 16.8V, as shown in the graph below. A dedicated level II or level III smart battery charger is required to charge the battery. Using this type of charger, the battery will request appropriate charging Voltage and Current from the smart battery charger.

The FULLY\_CHARGED bit in the BatteryStatus() will be set when the charging current tapers down under 113mA while charging at 16.8V.

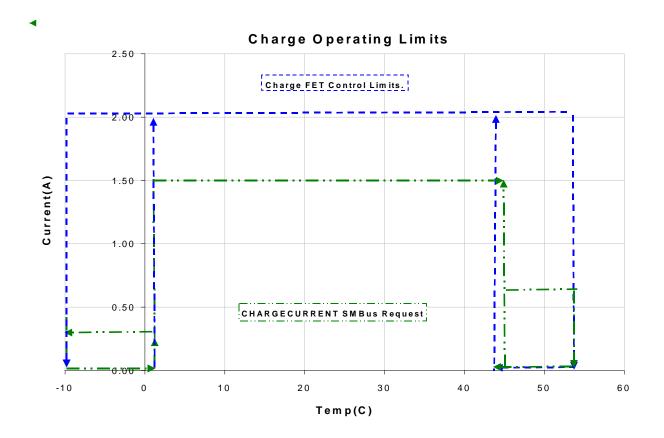

NOTE: If not charging & temperature > 45C then the battery enters Charge-Inhibit where ChargingCurrent() = 0 until temperature <= 44C.



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.1.6. Storage

Storage Temperature Limits:  $-20^{\circ}$ C to  $60^{\circ}$ C,  $\le 80\%$ RH

The battery packs should be stored in an environment with low humidity, free from corrosive gas at a recommended temperature range  $<21^{\circ}$ C. Extended exposure to temperatures above 45°C could degrade battery performance and life.

# 3.1.7. Terminal Specifications

See Mechanical Drawing for orientation of contacts J1-1,5

Terminal	Legend	Description
1	(+)	Positive side of battery
2	(C)	SMBus Clock. Internally a $1M\Omega$ resistor is connected between (C) and (-).
3	(D)	SMBus Data. Internally a $1M\Omega$ resistor is connected between (D) and (-).
4	(T)	$300\Omega \pm 5\%$ resistor connected between (T) and (-).
5	(-)	Negative Side Of Battery

• A key slot is also present on each pack for mechanical alignment adjacent to the positive terminal.

 The SMBus Clock and data lines require separate pull-ups to system logic voltage, NOT the battery voltage. Typically a 15KΩ pull-up resistor is used, but please refer to the SMBus Specification for additional information.

 
# 3.2. Fuel-Gauge Electronics

# 3.2.1. Overview Of Operation

The battery is capable of communicating with host or the charger through the System Management Bus (SMBus). The battery is fully SMBus and SBDS Revision 1.1 compliant. An 8-bit Reduced Instruction Set CPU (RISC) is used to process the core algorithms and perform operations required for battery monitoring. Charge and discharge current, cell and pack voltages, and pack temperature are all measured using an integrated analog to digital converter at 14-bit to 16-bit effective resolution.

The battery pack uses a system level approach to optimize the performance of the battery. It's primary functions are to provide fuel gauging and software based charge control, and to ensure safe operation throughout the life cycle of the battery.


The fuel gauge determines the State-Of-Charge (SOC) by integrating the input and output current and using impedance tracking to accurately track the available capacity of the attached battery. To achieve the desired fuel-gauging accuracy, high-performance analog peripherals are used to monitor capacity change, battery impedance, open-circuit voltage and temperature. These factors are continually applied to account for battery non-linearity and environmental conditions. This approach provides the user a meaningful and repeatable capacity measure with minimal risk of overstating run time. Visually, the SOC can be obtained from the 5-segment LCD panel on the end of the battery opposite to the connector. This LCD panel is always-on.



Charge control is used to provide optimal and safe charging requests to an SMBus level II or level III charger.

The system has three modes of operation; normal, sleep and shutdown. In normal mode, measurements, calculations, protection decisions and data updates are made on 1 sec intervals. Between these intervals, the electronics enters a reduced power mode. Sleep mode is entered when the system senses no host or charger present. While in this mode, battery parameters continue to be monitored at regular intervals. The system will continue in this mode until it senses host activity (communications or current flow). Shutdown mode occurs when the battery voltage falls below 2.3V/parallel cell group. In this mode, parasitic current is reduced to a minimum by shutting down the micro-controller and all associated circuitry. If this should happen, the battery will require an initial low current charge to bring the battery voltage back up before normal operation will resume.

The battery pack block diagram is shown below.

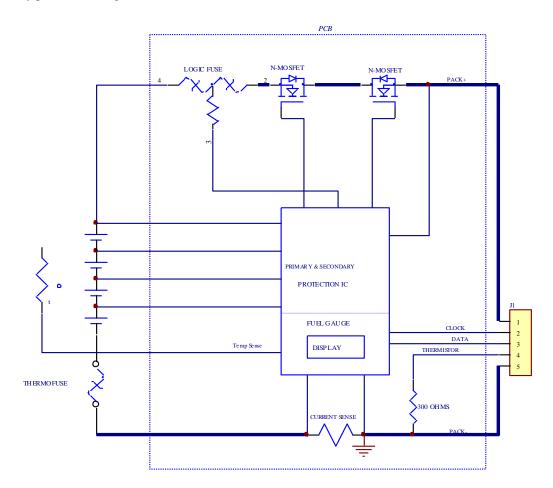



# Specification NumberDSND2034ZD25Specification Revision1.1Prepared ByRAHIssue date1/27/16

# **Battery Specification**

# 3.2.2. DC Specifications

Parameter	Limits	Remarks
Active mode current consumption	<745uA	When a host is detected (charging, discharging or
		communications).
Standby mode current consumption	<200uA	When no host activity is detected.
Shut-down mode current consumption	<1uA	Any cell voltage falls below 2300mV.

# 3.2.3. Measurement Accuracy

## 3.2.3.1.Voltage

The voltage measurements have a resolution of 1mV. The absolute accuracy of the reading is  $\pm 0.7\%$  over the operating range. Note that measurements are made at the cell stack (not the pack connector). Therefore internal resistance drops due to the shunt, safety components, and contact resistance are not taken into consideration.

## 3.2.3.2.Temperature

The internal pack temperature is measured by a on-chip temperature sensor in thermal contact with the cell stack. Temperature readings have a resolution of  $0.1^{\circ}$ K. The absolute accuracy is  $\pm 3^{\circ}$ K over an operating range of  $-20^{\circ}$ C to  $+80^{\circ}$ C.

# 3.2.3.3.Current

The current measurements have a resolution of 1mA. The absolute accuracy of the reading is  $\pm 0.7\%$  or  $\pm 3mA$  whichever is greater over the operating range. A guard band has been imposed around zero current (-5mA to +5mA).

## 3.2.4. LCD Indication

The battery can directly display the capacity information. The battery capacity is displayed as the relative SOC. Each LCD segment represents 20 percent of the full charge capacity. The LCD pattern definition is given in the table below. If the battery voltage is low, there will be no LCD indication. During charge, the most significant segment will blink.

Capacity		LCD Segments			
	1	2	3	4	5
0% - 19%					
20% - 39%					
40% - 59%					
60% - 79%					
80% - 100%					



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.3. SMBus and SBD Parameters

## 3.3.1. Overview Of Operations

The battery is fitted with a microprocessor and associated circuitry for communication with an external host device and/or smart battery charger. Reference should be made to the following specifications when reading this section:

- System Management Bus Specification (Rev 1.1, Dec 11, 1998) with the exception that it is necessary to wait at least 150uS between battery message transactions.
- Smart Battery Data Specification (Rev 1.1, Dec 15, 1998)
- Smart battery Charger Specification (Rev 1.0, June 27, 1996)

## 3.3.2. SMBus Logic Levels

Symbol	Parameter	Lin	nits	Units
		Min	Max	
V <sub>il</sub>	V <sub>il</sub> Data/Clock input low voltage		0.8	V
V <sub>ih</sub>	V <sub>ih</sub> Data/Clock input high voltage		5.5	V
V <sub>ol</sub>	Data/Clock output low voltage		0.4	V

## 3.3.3. SMBus Data Protocols

SMBus Interface complies with SBS Specification Version 1.1. The battery pack includes a simple bi-directional serial data interface. A host processor uses the interface to access various battery pack registers.

The interface uses a command-based protocol, where the host processor sends the battery address command byte to the battery pack. The command directs the battery pack to either store the next data received to a register specified command byte or output the data specified by the command byte.

## 3.3.4. SMBus Host-to-Battery Message Protocol


The Bus Host communicates with the battery pack using one of three protocols:

- Write Word
- Read Word
- Read Block

	Specification Number	DSND2034ZD25
IN SPIRED ENERGY SOLUTIONS FOR PORTABLE POWER	Specification Revision	1.1
	Prepared By	RAH
Battery Specification	Issue date	1/27/16


# 3.3.4.1.Write Word

The first byte of a Write Word access is the command code. The next two Bytes are the data to be written. In this example the master asserts the slave device address followed by the write bit. The device acknowledges and the master delivers the command code. The slave again acknowledges before the master sends the data word (low byte first). The slave acknowledges each byte according to the I<sup>2</sup>C specification, and the entire transaction is finished with a stop condition.

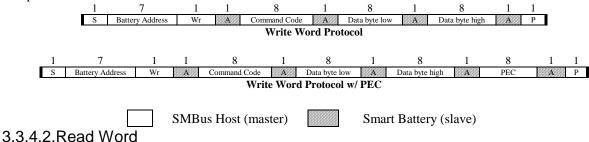



Reading data is slightly more complex than writing data. First the host must write a command to the slave device. Then it must follow that command with a repeated start condition to denote a read from that device's address. The slave then returns two bytes of data.

Note that there is not a stop condition before the repeated start condition, and that a "Not Acknowledge" signifies the end of the read transfer.

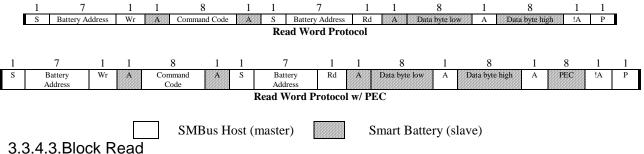


The Block Read begins with a slave address and a write condition. Then it must follow that command with a repeated start condition to denote a read from that device's address. After the repeated start the slave issues a byte count that describes how many data bytes will follow in the message. If a slave had 20 bytes to send, the first byte would be the number 20 (14h), followed by the 20 bytes of data. The byte count may not be 0. A Block Read can transfer a maximum of 32 bytes.

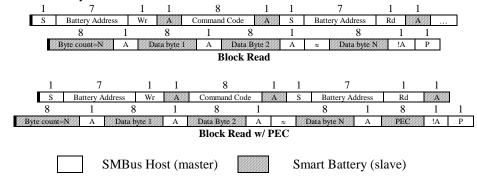

 


# 3.3.5. SMBus Battery-to-Charger Message Protocol

The Smart Battery, acting as an SMBus master will dynamically alter the charger characteristics of the Smart Charger, behaving as an SMBus slave using the SMBus Write Word protocol. Communication begins with the Smart Charge's address, followed by a Command Code and a two byte value. The Smart Charger adjust its output to correspond with the request.

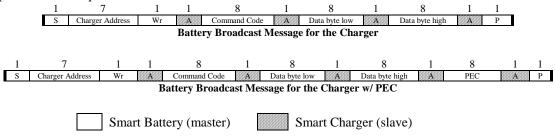

## 3.3.6. SMBus Battery Critical Message Protocol

A Smart Battery to SMBus Host or Smart Charger message is sent using the SMBus Write Word protocol. Communication begins with the SMBus Host's or Smart Battery Charger's address, followed by the Smart Battery's address which replaces the Command Code. The SMBus Host or Smart Charger can now determine that the Smart Battery was the originator of the message and that the following 16 bits are its status.

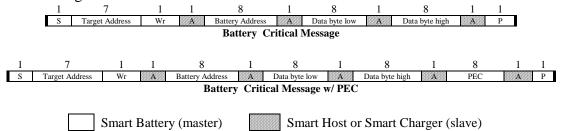

# 3.3.7. Host To Battery Messages (Slave Mode)

The Host acting in the role of bus master uses the read word, write word, and read block protocols to communicate with the battery, operating in slave mode.



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

## Host-to-Battery Messages

ARtae Time To Empty()     Dx06     Returns the predicted remaining operating time if the battery is discharged at the ARtaety value.     number of the battery is discharged at the ARtaety value of additional energy for battery can deliver the ARtaety value of additional energy for to seconds. If the ARtaety value of additional energy for battery can deliver the ARtaety value of additional energy for battery can deliver the ARtaety value of additional energy for to seconds. If the ARtaety value of additional energy for to seconds. If the ARtaety value of additional energy for voltage()     r     1       Temperature()     0x08     Returns the battery's value of additional energy for voltage()     0.1%     r       Current()     0x00     Returns the battery's value of additional energy for voltage()     0x00     n       AverageCurrent()     0x00     Returns the predicted margin of error.     percent     r     0       Axerage()     0x00     Returns the predicted remaining battery capacity expressed as a percentage of FulChargeCapacity().     mAh     r     0       AbsoluteStateOfCharge()     0x0d     Returns the predicted remaining battery capacity.     mAh     r     0       RemainingCapacity()     0x0f     Returns the redicted remaining battery value was the value of as a percentage of beignCapacity().     mAh     r     0       AverageTimeToEmpty()     0	Function	Command Code	Description	Unit	Access	Default (POR)
Remaining Capacity Alarm ()     0x01     Remaining Time Alarm     mixtures     r/w     10       BatteryMode()     0x02     Remaining Time Alarm Threshold.     minutes     r/w     0.0081       AlRate()     0x03     Battery Operational Modes.     Bittery Mode()     0x04     This function is the first half of a two-function call-set used in calculations made by the AlRate Time To Elli), Ratest Time To Elliy, Oh, and AtRate(V)     r/w     0.0081       AlRate Time To Elli)     0x06     Returns the predicted remaining time to fully charge the minutes     r     65535       AlRate Time To Elli)     0x06     Returns the predicted remaining time to fully charge the minutes     r     65535       AlRateOK()     0x07     Returns the predicted remaining time to fully charge the monthe battery is discharged at the AlRate() value.     0.11     1       AlRateOK()     0x07     Returns the Return Value of additional energy for 10 secones. If the Rhate() value is a con positive, the 0.11     1     1       Vallage()     0x08     Petitime to battery value of additional energy for 10 secones. If the Rhate() value is another on positive, the 0.11     1     1       Current()     0x08     Petitime to battery value of nasared at the cell task / 1     n''< r	ManufacturerAccess()	0x00			r/w	· · · · ·
Remaining Time Alarm Threshold.     minutes     r/w     10       BatteryModel     00.03     BatteryOperational Modes.     Bit flags.     r/w     0.0081       AlRate()     0.04     This function is the first half of a two-function call-set used to set the AlRate Time FOFUI(). ARAte Time FOFUI(), ARAte Time FOFUI (), ARAte Time FOFUI (), ARAte Time FOFUI (), ARAte Time FOFUI (), ARATEVAL (), VAUS EXAMPLES	V	0x01	Remaining Capacity Alarm Threshold .	mAh	r/w	250
Battery/Adde()     0x03     Battery Operational Modes.     Bit If aga     r/w     0x040       ARRate()     0x04     This function is the rish tail of a two-function call-sed to set the ARRate value used in calculations made by the ARRate TimeToFUI()     r/w     0       ArRate TimeToFUI()     0x05     Returns the predicted remaining time to fully charge the battery at the ARRate() value.     minutes     r     65535       ArRateTimeToFUI()     0x07     Returns the predicted remaining operating time if the battery     minutes     r     65535       ArRateOK()     0x07     Returns the predicted remaining operating time if the battery     minutes     r     65535       ArRateOK()     0x07     Returns the predicted remaining upper time to taitery can oble the battery can deliver the ARRate value of additional energy for 10 tocords. If the ARRate value con opsilive, the     0.1*K     r     1       Temperature()     0x08     Returns the battery value tait indicates whether or not the battery can oble at the taitery at the taitery value.     0.1*K     r     0       AverageCurrent()     0x08     Returns the bact's internal temperature.     0.1*K     r     0       AverageTimeToEmpty()     0x0cd     Returns the predicted remaining battery capac				minutes	r/w	
AtRate()     0x04     This function is the first half of a two-function call-set used to AtRate TimeToFull(). AtRate TimeToEmpty(), and AtRateOK()     mA     r/w     0       AtRate TimeToFull()     0x05     Returns the predicted remaining operating time to fully charge the battery at the AtRate (value.     minutes     r     65535       AtRateTimeToFull()     0x05     Returns the predicted remaining operating time if the battery to accharge at the AtRate (value.     minutes     r     1       AtRateOK()     0x07     Returns the Daclean value that indicates whether or not the battery can deliver the AtRate (value is zero or positive, the AtRateOK() inclusive value is zero or positive, the AtRateOK() inclusive value (value is zero or positive, the AtRateOK() inclusive values (value is zero or positive, the A		0x03		Bit flags	r/w	0x0081
ARtae Time To Empty()     Dx06     Returns the predicted remaining operating time if the battery is discharged at the ARtaety value.     number of the battery is discharged at the ARtaety value of additional energy for battery can deliver the ARtaety value of additional energy for to seconds. If the ARtaety value of additional energy for battery can deliver the ARtaety value of additional energy for battery can deliver the ARtaety value of additional energy for to seconds. If the ARtaety value of additional energy for to seconds. If the ARtaety value of additional energy for voltage()     r     1       Temperature()     0x08     Returns the battery's value of additional energy for voltage()     0.1%     r       Current()     0x00     Returns the battery's value of additional energy for voltage()     0x00     n       AverageCurrent()     0x00     Returns the predicted margin of error.     percent     r     0       Axerage()     0x00     Returns the predicted remaining battery capacity expressed as a percentage of FulChargeCapacity().     mAh     r     0       AbsoluteStateOfCharge()     0x0d     Returns the predicted remaining battery capacity.     mAh     r     0       RemainingCapacity()     0x0f     Returns the redicted remaining battery value was the value of as a percentage of beignCapacity().     mAh     r     0       AverageTimeToEmpty()     0	AtRate()	0x04	set the AtRate value used in calculations made by the AtRateTimeToFull(), AtRateTimeToEmpty(), and AtRateOK()		r/w	0
AtRateOK()     0x07     Returns a Boolean value that indicates whether or not the battery can deliver the AtRate value of additional energy for 10 seconds, if the additional energy for 10 seconds, if the second as a percentage of FailChargeCapacity().     Dot 17 seconds, if the AtRate value of additional energy for 10 seconds, if the additional energy for 10 seconds, if the additional energy for 10 seconds, if the predicted remaining battery faesited for enaring battery for 10 seconds, if the predicted remaining ba	AtRateTimeToFull()	0x05		minutes	r	65535
battery can deliver the ARRate value of additional energy for ARRateOKI) function will ALWAYS return TRUE.     Image: Construct the ARRate value of additional energy for ARRateOKI) function will ALWAYS return TRUE.       Temperature()     0x08     Returns the battery's voltage (measured at the cell stack)     mV     r       Current()     0x0a     Returns the battery's voltage (measured at the cell stack)     mV     r       AverageCurrent()     0x0a     Returns the addition of accepted) through the starty's terminals.     mA     r     0       AverageCurrent()     0x0b     Returns the expected margin of error.     percent     r     100       RelativeStateOfCharge()     0x0d     Returns the predicted remaining battery capacity expressed as a percentage of Eul(ChargeCapacity().     percent     r     0       AbsoluteStateOfCharge()     0x0d     Returns the predicted remaining battery capacity.     mAh     r     0       FullChargeCapacity()     0x11     Returns the predicted remaining battery capacity.     mAh     r     0       FullChargeCapacity()     0x11     Returns the predicted remaining battery capacity.     mAh     r     65535       AverageTimeToEmpty()     0x11     Returns the otherwage of the predi	AtRateTimeToEmpty()	0x06		minutes	r	65535
Voltage()     0x09     Returns the battery's voltage (measured at the cell stack)     mV     r       Current()     0x0a     Returns the current being supplied (or accepted) through the battery's terminals.     mA     r     0       AverageCurrent()     0x0b     Returns arolling average based upon the last 64 samples of current.     mA     r     0       MaxEror()     0x0c     Returns the expected margin of error.     percent     r     100       RelativeStateOfCharge()     0x0d     Returns the predicted remaining battery capacity expressed percent     percent     r     0       AbsoluteStateOfCharge()     0x0f     Returns the predicted tree regaracity().     mAh     r     0       RemainingCapacity()     0x0f     Returns the predicted tree regaracity when fully charged.     mAh     r     0       RunTimeToEmpty()     0x11     Returns the predicted tremaining battery (apacity when fully charged.     mAh     r     65535       AverageTimeToFull()     0x11     Returns the brediced remaining battery (mutes are discider decarging voltage.     mV     r     16600       AverageTimeToFull()     0x14     Returns the battery's desided charging voltage. <td>AtRateOK()</td> <td>0x07</td> <td>battery can deliver the AtRate value of additional energy for 10 seconds. If the AtRate() value is zero or positive, the</td> <td>boolean</td> <td>r</td> <td>1</td>	AtRateOK()	0x07	battery can deliver the AtRate value of additional energy for 10 seconds. If the AtRate() value is zero or positive, the	boolean	r	1
Current()     0x0a     Returns the current being supplied (or accepted) through the battery's terminals.     mA     r     0       AverageCurrent()     0x0b     Returns a rolling average based upon the last 64 samples of current.     mA     r     0       MaxError()     0x0c     Returns the expected margin of error.     percent     r     100       RelativeStateO(Charge()     0x0d     Returns the predicted remaining battery capacity expressed as a percentage of DelignCapacity().     percent     r     0       AbsoluteStateO(Charge()     0x0f     Returns the predicted remaining battery capacity expressed as a percentage of DelignCapacity().     mAh     r     0       RemainingCapacity()     0x0f     Returns the predicted remaining battery capacity.     mAh     r     0       Returns the predicted remaining battery capacity.     mAh     r     0     0       AverageTimeToEmpty()     0x11     Returns the rolling average of the predicted remaining battery if at the present     minutes     r     65535       ChargingCurrent()     0x14     Returns the rolling average of the predicted remaining the musters of assign capacity.     mA     r     15600       DatargingVoltage()	Temperature()	0x08	Returns the pack's internal temperature.	0.1 <sup>⁰</sup> K	r	
Current()     0x0a     Returns the current being supplied (or accepted) through the battery's terminals.     mA     r     0       AverageCurrent()     0x0b     Returns a rolling average based upon the last 64 samples of current.     mA     r     0       MaxError()     0x0c     Returns the expected margin of error.     percent     r     100       RelativeStateO(Charge()     0x0d     Returns the predicted remaining battery capacity expressed as a percentage of DelignCapacity().     percent     r     0       AbsoluteStateO(Charge()     0x0f     Returns the predicted remaining battery capacity expressed as a percentage of DelignCapacity().     mAh     r     0       RemainingCapacity()     0x0f     Returns the predicted remaining battery capacity.     mAh     r     0       Returns the predicted remaining battery capacity.     mAh     r     0     0       AverageTimeToEmpty()     0x11     Returns the rolling average of the predicted remaining battery if at the present     minutes     r     65535       ChargingCurrent()     0x14     Returns the rolling average of the predicted remaining the musters of assign capacity.     mA     r     15600       DatargingVoltage()		0x09		mV	r	
MaxError()current.current.MaxError()0x0cReturns the expected margin of error.percentr100RelativeStateOfCharge()0x0dReturns the predicted remaining battery capacity expressed as a percentage of FullChargeCapacity().percentr0AbsoluteStateOfCharge()0x0eReturns the predicted remaining battery capacity expressed as a percentage of DesignCapacity().mAhr0RemainingCapacity()0x10Returns the predicted remaining battery capacity when fully charged.mAhr0FullChargeCapacity()0x11Returns the predicted remaining battery capacity when fully charged.mAhr65535AverageTimeToEmpty()0x12Returns the rolling average of the predicted remaining batteryminutesr65535AverageTimeToFull()0x14Returns the toting average of the predicted remaining batteryminutesr65535ChargingCurrent()0x14Returns the battery's desired charging rate.mAr1500ChargingVoltage()0x15Returns the battery's duarde/discharge cycles the battery has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of DesignCapacity()mXhr2500DesignCapacity()0x18Returns the theoretical capacity of the new battery. macy/discharge cycles the battery. macy/discharge cycles the battery. mAhr14400SpecificationInfo()0x18Returns the theoretical capacity of the new battery. macy/discharge cycles the battery. macy/discharge cyc	Current()	0x0a		mA	r	0
RelativeStateOfCharge()     0x0d     Returns the predicted remaining battery capacity expressed as a percentage of FullChargeCapacity().     percent     r     0       AbsoluteStateOfCharge()     0x0e     Returns the predicted remaining battery capacity expressed as a percentage of DesignCapacity().     percent     r     0       RemainingCapacity()     0x01     Returns the predicted remaining battery capacity expressed as a percentage of DesignCapacity().     mAh     r     0       FullChargeCapacity()     0x10     Returns the predicted remaining battery capacity when fully charged.     mAh     r     0       RunTimeToEmpty()     0x11     Returns the rolling average of the predicted remaining battery iffe.     minutes     r     65535       AverageTimeToFull()     0x13     Returns the rolling average of the predicted remaining the until the battery reaches full charge.     mA     r     1500       ChargingCurrent()     0x14     Returns the battery's desired charging rate.     mA     r     16800       BatteryStatus()     0x16     Returns the othery's desired charging voltage.     mV     r     16800       DesignCapacity()     0x17     Returns the theoretical voltage of a new battery.     Bit flags     <	AverageCurrent()	0x0b		mA	r	0
as a percentage of FullChargeČapacitý().     r     r       AbsoluteStateOfCharge()     0x0e     Returns the predicted remaining battery capacity expressed as a percentage of DesignCapacity().     percent     r     0       RemainingCapacity()     0x01     Returns the predicted remaining battery capacity.     mAh     r     0       RemainingCapacity()     0x10     Returns the predicted active capacity.     mAh     r     0       FullChargeCapacity()     0x11     Returns the predicted remaining battery capacity.     mAh     r     0       RunTimeToEmpty()     0x12     Returns the rolling average of the predicted remaining battery     minutes     r     65535       AverageTimeToFull()     0x12     Returns the battery's desired charging.     mN     r     1500       ChargingCurrent()     0x14     Returns the battery's desired charging rate.     mA     r     1500       ChargingVoltage()     0x15     Returns the battery's tastive ord.     Bit flags     r     0x2Co       CycleCount()     0x16     Returns the battery's desired charging voltage.     mV     r     0      DesignCapacity()     0x18	MaxError()	0x0c	Returns the expected margin of error.	percent	r	100
as a percentage of DesignCapacity().nnRemainingCapacity()0x0fReturns the predicted remaining battery capacity.mAhrRunTimeToEmpty()0x10Returns the predicted battery capacity when fully charged.mAhrRunTimeToEmpty()0x11Returns the predicted battery capacity when fully charged.mAhrAverageTimeToEmpty()0x12Returns the predicted remaining battery life at the presentminutesrAverageTimeToFull()0x12Returns the rolling average of the predicted remaining timeminutesrChargingCurrent()0x14Returns the battery's desired charging rate.mArChargingCurrent()0x16Returns the battery's desired charging rate.mArChargingVoltage()0x17Returns the battery's desired charging voltage.mVrBatteryStatus()0x16Returns the battery's status word.Bit flagsr0x2C0CycleCount()0x17Returns the theoretical capacity of the new battery.mAhr14400DesignCapacity()0x18Returns the theoretical capacity of the new battery.mAhr2500DesignCapacity()0x18Returns the theoretical capacity of the sBDS the battery pack supports, as well as voltage and current scaling information.Formatted wordr0x0031ManufacturerDate()0x12Returns the electronics serial number.numberr14400SpecificationInfo()0x16Returns the alectronics serial number.Formatted word<	RelativeStateOfCharge()	0x0d		percent	r	0
FullChargeCapacity()   0x10   Returns the predicted battery capacity when fully charged.   mAh   r     RunTimeToEmpty()   0x11   Returns the predicted remaining battery life at the present rate of discharge.   minutes   r   65535     AverageTimeToEmpty()   0x12   Returns the rolling average of the predicted remaining battery life.   minutes   r   65535     AverageTimeToFull()   0x13   Returns the rolling average of the predicted remaining time until the battery reaches full charge.   mAh   r   65535     ChargingVoltage()   0x14   Returns the battery's desired charging rate.   mA   r   1500     ChargingVoltage()   0x16   Returns the battery's status word.   Bit flags   r   0x2C0     CycleCount()   0x17   Returns the theoretical capacity of the new battery.   mAh   r   2500     DesignCapacity()   0x18   Returns the theoretical capacity of the new battery.   mAh   r   2500     DesignCapacity()   0x18   Returns the theoretical capacity of the new battery.   mAh   r   2500     DesignCapacity()   0x18   Returns the electronics was manufactured.   Formated   r   0x0031	AbsoluteStateOfCharge()	0x0e		percent	r	0
RunTimeToEmpty()   0x11   Returns the predicted remaining battery life at the present rate of discharge.   minutes   r   65535     AverageTimeToEmpty()   0x12   Returns the rolling average of the predicted remaining battery life.   minutes   r   65535     AverageTimeToFull()   0x13   Returns the rolling average of the predicted remaining time unit the battery reaches full charge.   minutes   r   65535     ChargingCurrent()   0x14   Returns the battery's desired charging voltage.   mA   r   1500     ChargingVoltage()   0x15   Returns the battery's desired charging voltage.   mV   r   16800     BatteryStatus()   0x16   Returns the number of charge/discharge cycles the battery   mV   r   0     CycleCount()   0x18   Returns the theoretical capacity of the new battery.   mA   r   2500     DesignCapacity()   0x18   Returns the version number of the SBDS the battery pack stated states word.   Formatted   r   0x0031     SpecificationInfo()   0x18   Returns the version number of the SBDS the battery new formatted word   Formatted   r   0x0031     ManufacturerDate()   0x1b   Returns the date the electronics was manufactured. </td <td>RemainingCapacity()</td> <td>0x0f</td> <td>Returns the predicted remaining battery capacity.</td> <td>mAh</td> <td>r</td> <td>0</td>	RemainingCapacity()	0x0f	Returns the predicted remaining battery capacity.	mAh	r	0
AverageTimeToEmpty()0x12rate of discharge.minutesr65535AverageTimeToFull()0x13Returns the rolling average of the predicted remaining time until the battery reaches full charge.minutesr65535AverageTimeToFull()0x14Returns the rolling average of the predicted remaining time until the battery reaches full charge.mAr65535ChargingCurrent()0x14Returns the battery's desired charging rate.mAr1500ChargingVoltage()0x16Returns the battery's desired charging voltage.mVr16800BatteryStatus()0x16Returns the battery's status word.Bit flagsr0x2C0CycleCount()0x17Returns the bottery's status word.Bit flagsr0x2C0DesignCapacity()0x19Returns the theoretical capacity of the new battery.mAr2500DesignCapacity()0x18Returns the theoretical voltage of a new battery.mVr14400SpecificationInfo()0x1aReturns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.Formatted wordr0x0031ManufacturerDate()0x10Returns the electronics was manufactured.Formatted wordrnManufacturerName()0x20Returns a character array containing the manufacture's name.string rrINSPIREDE ND20342D25DeviceName()0x21Returns a character array that contains the battery's name.string rrND2	FullChargeCapacity()	0x10	Returns the predicted battery capacity when fully charged.	mAh	r	
AverageTimeToFull()0x13Returns the rolling average of the predicted remaining time until the battery reaches full charge.minutesr65535ChargingCurrent()0x14Returns the battery's desired charging rate.mAr1500ChargingVoltage()0x15Returns the battery's desired charging voltage.mVr18800BatteryStatus()0x16Returns the battery's desired charging voltage.mVr18800BatteryStatus()0x17Returns the battery's status word.Bit flagsr0x2C0CycleCount()0x17Returns the number of charge/discharge cycles the battery. has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of DesignCapacity()ox18Returns the theoretical capacity of the new battery.mAhr2500DesignCapacity()0x18Returns the theoretical voltage of a new battery. supports, as well as voltage and current scaling information. wordmVr14400SpecificationInfo()0x1bReturns the date the electronics was manufactured. urent scaling information.Formatted wordr0x0031ManufacturerDate()0x1cReturns the electronics serial number. name.numberrINSPIREDE name.ManufacturerName()0x20Returns a character array containing the manufacture's name.stringrINSPIREDE ND2034ZD25DeviceName()0x21Returns a character array that contains the battery's name.stringrND2034ZD25DeviceName()0	RunTimeToEmpty()	0x11		minutes	r	65535
ChargingCurrent()0x14Returns the battery's desired charging rate.mAr1500ChargingVoltage()0x15Returns the battery's desired charging voltage.mVr16800BatteryStatus()0x16Returns the battery's status word.Bit flagsr0x2C0CycleCount()0x17Returns the number of charge/discharge cycles the battery has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of DesignCapacity()mNr2500DesignCapacity()0x18Returns the theoretical capacity of the new battery.mAhr2500DesignCapacity()0x18Returns the theoretical capacity of the new battery.mAhr0x0031DesignCapacity()0x18Returns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.mVr14400ManufacturerDate()0x10Returns the electronics serial number.Formatted wordr0x0031ManufacturerName()0x20Returns a character array that contains the battery's name.stringrINSPIREDE ND2034ZD25DeviceName()0x21Returns a character array that contains the battery's name.stringrND2034ZD25DeviceChemistry()0x22Returns a character array that contains the battery's name.stringrND2034ZD25DeviceChemistry()0x22Returns a character array that contains the battery's name.stringrND2034ZD25DeviceChemistry()0x22	AverageTimeToEmpty()	0x12		minutes	r	65535
ChargingVoltage()0x15Returns the battery's desired charging voltage.mVr16800BatteryStatus()0x16Returns the battery's status word.Bit flagsr0x2C0CycleCount()0x17Returns the number of charge/discharge cycles the battery has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of DesignCapacity.cyclesr0DesignCapacity()0x18Returns the theoretical capacity of the new battery.mAhr2500DesignCapacity()0x19Returns the theoretical capacity of the new battery.mVr14400SpecificationInfo()0x1aReturns the teoretical voltage of a new battery pack supports, as well as voltage and current scaling information.Formatted wordrManufacturerDate()0x1cReturns the date the electronics was manufactured.Formatted wordrManufacturerName()0x20Returns a character array containing the manufacture's name.string stringrINSPIREDE ND2034ZD25DeviceChemistry()0x22Returns a character array that contains the battery's name.string stringrND2034ZD25DeviceChemistry()0x22Returns a character array that contains the battery's name.string stringrND2034ZD25	AverageTimeToFull()	0x13	until the battery reaches full charge.	minutes	r	65535
BatteryStatus()     0x16     Returns the battery's status word.     Bit flags     r     0x2C0       CycleCount()     0x17     Returns the number of charge/discharge cycles the battery has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of DesignCapacity.     r     0       DesignCapacity()     0x18     Returns the theoretical capacity of the new battery.     mAh     r     2500       DesignCapacity()     0x19     Returns the theoretical voltage of a new battery.     mV     r     14400       SpecificationInfo()     0x1a     Returns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.     Formatted r     0x0031       ManufacturerDate()     0x1c     Returns the electronics was manufactured.     Formatted word     r       ManufacturerName()     0x20     Returns a character array containing the manufacture's name.     string     r     INSPIREDE       DeviceName()     0x21     Returns a character array that contains the battery's name.     string     r     NICo		0x14	Returns the battery's desired charging rate.	mA	r	1500
CycleCount()0x17Returns the number of charge/discharge cycles the battery has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of DesignCapacity.cyclesr0DesignCapacity()0x18Returns the theoretical capacity of the new battery.mAhr2500DesignVoltage()0x19Returns the theoretical capacity of the new battery.mVr14400SpecificationInfo()0x1aReturns the theoretical voltage of a new battery.mVr0x0031ManufacturerDate()0x1bReturns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.Formatted wordr0x0031ManufacturerDate()0x1cReturns the electronics serial number.rinumberr0x0031ManufacturerName()0x20Returns a character array containing the manufacture's name.stringrINSPIREDEDeviceName()0x21Returns a character array that contains the battery's name.stringrND2034ZD25DeviceChemistry()0x22Returns a character array that contains the battery's name.stringrNICo		0x15	Returns the battery's desired charging voltage.	mV	r	16800
has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of DesignCapacity.mAhr2500DesignCapacity()0x18Returns the theoretical capacity of the new battery.mAhr2500DesignVoltage()0x19Returns the theoretical capacity of the new battery.mVr14400SpecificationInfo()0x1aReturns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.Formatted wordr0x0031ManufacturerDate()0x1bReturns the date the electronics was manufactured.Formatted wordr0x0031SerialNumber()0x1cReturns the electronics serial number.numberrManufacturerName()0x20Returns a character array containing the manufacture's name.stringrINSPIREDE ND2034ZD25DeviceName()0x21Returns a character array that contains the battery's name.stringrNI2034ZD25 NICoDeviceChemistry()0x22Returns a character array that contains the battery's name.stringrNI2034ZD25		0x16		Bit flags	r	0x2C0
DesignVoltage()   0x19   Returns the theoretical voltage of a new battery.   mV   r   14400     SpecificationInfo()   0x1a   Returns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.   Formatted word   r   0x0031     ManufacturerDate()   0x1b   Returns the date the electronics was manufactured.   Formatted word   r   0x0031     SerialNumber()   0x1c   Returns the electronics serial number.   number   r   r     Reserved   0x1f   0x1f   r   r   r   r     ManufacturerName()   0x20   Returns a character array containing the manufacture's name.   string   r   INSPIREDE     DeviceName()   0x21   Returns a character array that contains the battery's name.   string   r   NI2034ZD25     DeviceChemistry()   0x22   Returns a character array that contains the battery's name.   string   r   NICo	CycleCount()	0x17	has experienced. A charge/discharge cycle is defined as: an amount of discharge approximately equal to the value of	cycles	r	0
SpecificationInfo()     0x1a     Returns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.     Formatted word     r     0x0031       ManufacturerDate()     0x1b     Returns the date the electronics was manufactured.     Formatted word     r        SerialNumber()     0x1c     Returns the electronics serial number.     number     r        SerialNumber()     0x1d     0x1d     r       r        ManufacturerName()     0x20     Returns a character array containing the manufacture's name.     string     r     INSPIREDE       DeviceName()     0x21     Returns a character array that contains the battery's name.     string     r     NI2034ZD25       DeviceChemistry()     0x22     Returns a character array that contains the battery's name.     string     r     NICo	DesignCapacity()	0x18	Returns the theoretical capacity of the new battery.	mAh	r	2500
SpecificationInfo()     0x1a     Returns the version number of the SBDS the battery pack supports, as well as voltage and current scaling information.     Formatted word     r     0x0031       ManufacturerDate()     0x1b     Returns the date the electronics was manufactured.     Formatted word     r        SerialNumber()     0x1c     Returns the electronics serial number.     number     r        SerialNumber()     0x1d     0x1d     r       r        ManufacturerName()     0x20     Returns a character array containing the manufacture's name.     string     r     INSPIREDE       DeviceName()     0x21     Returns a character array that contains the battery's name.     string     r     NI2034ZD25       DeviceChemistry()     0x22     Returns a character array that contains the battery's name.     string     r     NICo		0x19		mV	r	14400
word word   SerialNumber() 0x1c Returns the electronics serial number. number r   Reserved 0x1d r r   0x1f 0x1f r r   ManufacturerName() 0x20 Returns a character array containing the manufacture's name. string r   DeviceName() 0x21 Returns a character array that contains the battery's name. string r ND2034ZD255   DeviceChemistry() 0x22 Returns a character array that contains the battery's name. string r NICo	SpecificationInfo()	0x1a	Returns the version number of the SBDS the battery pack		r	0x0031
Reserved 0x1d - 0x1f r   ManufacturerName() 0x20 Returns a character array containing the manufacture's name. string r INSPIREDE   DeviceName() 0x21 Returns a character array that contains the battery's name. string r ND2034ZD25   DeviceChemistry() 0x22 Returns a character array that contains the battery's chemistry. string r NICo	ManufacturerDate()	0x1b	Returns the date the electronics was manufactured.		r	
-     -	SerialNumber()	0x1c	Returns the electronics serial number.	number	r	
ManufacturerName()     0x20     Returns a character array containing the manufacture's name.     string     r     INSPIREDE       DeviceName()     0x21     Returns a character array that contains the battery's name.     string     r     ND2034ZD25       DeviceChemistry()     0x22     Returns a character array that contains the battery's string     r     NICo	Reserved	-			r	
DeviceName()     0x21     Returns a character array that contains the battery's name.     string     r     ND2034ZD25       DeviceChemistry()     0x22     Returns a character array that contains the battery's chemistry.     string     r     NiCo	ManufacturerName()			string	r	INSPIREDE
DeviceChemistry()     0x22     Returns a character array that contains the battery's     string     r     NiCo		021		otrin a		ND20247D25
	V		Returns a character array that contains the battery's	ů.		
	ManufacturerData()	0x23	Returns data specific to the manufacture.		r	



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.3.8. Battery To Charger Messages (Master Mode)

The battery, acting in the role of a bus master, uses the write word protocol to communicate with the charger, operating in slave mode. If the CHARGER\_MODE bit in BatteryMode() is clear, the Battery will broadcast Charger request information every <u>10 to 60 second</u>.

#### Battery-to-Charger Messages

Function	Command Code	Description	Unit	Access
ChargingCurrent()	0x14	Sends the desired charging rate to the battery charger	mA	W
ChargingVoltage()	0x15	Sends the desired charging voltage to the battery charger		W

## 3.3.9. Critical Messages (Master Mode)

Whenever the Battery detects a critical condition, it takes the role of a bus master and sends AlarmWarning() message to the Host and/ or Charger. The Battery broadcasts the AlarmWarning() message at <u>10 second intervals</u> until the critical condition(s) has been corrected.

#### **Battery Critical Messages**

Function	Command Code	Description	Unit	Access
AlarmWarning()	0x16	This message is to the host and/or charger to notify them that one or more alarm conditions exist.	Formatted word	W



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

#### **Alarm Bit Definitions**

Bit	Battery Status	Set When:	Action When Set:	Cleared When:
15	OVER_CHARGD_ALARM	RemainingCapacity() exceeds FullChargeCapacity() + <b>300mAh.</b>	Stop charging.	A continuous discharge of >= 300mAh.
14	TERMINATE_CHARGE_ALARM	Primary Charge Termination, Cell Over-Voltage (COV), Over-Current Charge (OCC), Over-Temp Charge (OTC) conditions. COV = 4350mV OCC = 2000mA OTC = 58°C	Stop charging.	RelativeStateOfCharge() <= 95%, COV, OCC or OTC recovery threshold. COV recovery <= 4200mV OCC recovery <= 200mA for 70sec OTC recovery <= 56°C
13	Reserved			
12	OVER_TEMP_ALARM	Over-Temp Charge (OTC) or Over- Temp discharge (OTD) condition. OTC=58°C OTD=75°C	Appropriate FET will be disabled to prevent further action.	OTC or OTD recovery threshold. OTC recovery = 56°C OTD recovery = 65°C
11	TERMINATE_DISCHARGE_ALARM	RelativeStateOfCharge() <= 0%, Cell or Pack Under-Voltage (CUV), Over-Current Discharge (OCD), Over- Temp Discharge (OTD) conditions. CUV = 2400mV OCD = -10000mA OTD = 75°C	Stop discharging.	RelativeStateOfCharge() >= 1%, CUV, OCD or OTD recovery threshold. CUV recovery >= 3000mV OCD recovery >= -200mA for 70sec OTD recovery <= 65°C
10	Reserved			
9	REMAINING_CAPACITY_ALARM (User settable)	RemainingCapacity() < RemainingCapacityAlarm().	User defined.	RemainingCapacityAlarm() = 0 or is <= RemainingCapcity().
8	REMAINING_TIME_ALARM ( User settable )	AverageTimeToEmpty() < RemainingTimeAlarm().	User defined.	RemainingTimeAlarm() = 0 or <= AverageTimeToEmpty().

#### **Status Bit Definitions**

Bit	Battery Status	Set When:	Action When Set:	Cleared When:
7	INITIALIZED		None.	
6	DISCHARGING	Battery is not in charge mode.	None.	Battery is in charging mode.
5	FULLY CHARGED	When the battery detects a primary charge termination.	Stop charging.	RelativeStateOfCharge() <= 95%.
4	FULLY DISCHARGED	RelativeStateOfCharge() <= 0%.	Stop discharging.	RelativeStateOfCharge() >= 20%.

## 3.3.10.Pack Calibration Cycle

The fuel-gauge uses the Impedance Track Technology to measure and calculate the available charge in battery cells. The achievable accuracy is better than 1% error over the lifetime of the battery. Max Error increases by 1% in 20 cycles, e.g., only occasionally is a full charge/discharge learning cycle required to maintain high accuracy.

# **3.4.** Protection Electronics

## 3.4.1. Overview Of Operation

Electronic circuitry is permanently connected within the battery pack to prevent damage if either the charger or host device fails to function correctly. The circuitry also protects the battery if an illegal current source is placed across



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

the battery terminals, or an illegal load is connected. Redundant levels of protection have been implemented (the primary protection levels are auto-resettable and the secondary are non-resettable ).

# 3.4.2. Charge Protection

#### Over-Voltage:

The primary protection circuit will prevent the battery from charging if any cell voltage >= 4350 mV. Then, once all cell voltages are <= 4200 mV, it will allow charging again.

The secondary protection circuit will prevent the battery from charging if any cell voltage  $\ge 4.45V + -0.05V$  by blowing a power path logic fuse. The fuse is non-re-settable rendering the battery pack non-functional.

#### Over-temp:

The primary protection circuit also provides over-temperature protection and will prevent the battery from charging at temperatures  $=>54^{\circ}C(\text{see paragraph 3.1.5 for ChargeCurrent() request})$ . Then, once the battery temperature has cooled to  $<=45^{\circ}C$ , it will again allow charging.

#### Over-Current:

The primary protection circuit also provides continuous over-current protection and will prevent the battery from charging at Current() =>2.00A. Then, once the AverageCurrent() <= 200mA for 70sec, the battery will re-test the over-current condition, and again allow charging.

## 3.4.3. Discharge Protection

#### Under-Voltage:

The primary protection circuit will prevent the battery from being further discharged once any cell voltage reaches  $\langle =2500$  mV. Then, once all cell voltages are  $\rangle = 3000$  mV, it will allow discharge again.

#### Over-temp:

The primary protection circuit also provides over-temperature protection and will prevent the battery from discharging at temperatures =>75°C. Then, once the battery temperature has cooled to <=65°C, it will again allow discharging.

If the battery reaches 85°C for any reason the secondary protection circuit will blow the in-line power path logic fuse. The fuse is non-re-settable rendering the battery pack non-functional.

#### **Over-Current:**

The primary protection circuit also provides continuous over-current protection and will prevent the battery from discharging at Current()  $\leq$  -10.0A. Then, Once the AverageCurrent()  $\geq$  -200mA for 70sec, the battery will re-test the over-current condition, and again allow discharging.




Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.4.4. Short-Circuit Protection

The primary protection circuit will prohibit the discharge of the battery if a short-circuit is placed across the battery +/- terminals. Then, once the AverageCurrent() >= -1mA for 70sec, the battery will re-test the short-circuit condition, and again allow discharging.

The pack is design to withstand reasonable in-rush currents without resetting the electronics and without interrupting the discharge cycle. The following graph illustrates the short-circuit/in-rush set points as implemented:

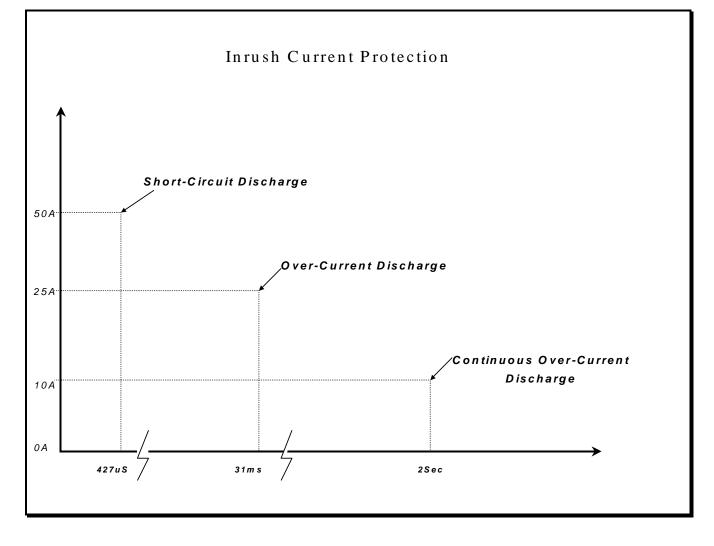



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.5. Passive Safety Protection

## 3.5.1. Overview Of Operation

The battery pack is fitted with additional components to protect it against abusive charge and discharge conditions. These are in addition to the electronic protection.

## 3.5.2. Thermal Fuse

A Thermal Fuse is fitted in series with the charge/ discharge path to protect the battery from over temperature. This device goes open circuit if the cell case temperature reaches the fuse's temperature rating of  $93^{\circ}C$  (+0°C, -5°C). The fuse is non-re-settable rendering the battery pack non-functional.

## 3.5.3. Slow-Blow Current Fuse (Logic Fuse)

A current slow-blow fuse is assembled in series with the battery pack to protect the battery pack against abusive over current over-load. The hold current is rated at 15A for 4 hours (minimum@25C). The fuse is non-re-settable rendering the battery pack non-functional.

## 3.6. Mechanical Specifications

#### 3.6.1. Weight

Approximately 0.23 Kg.

#### 3.6.2. Mating Connector

The recommended interconnection mating male connector is AMP P/N 5787422-1 or 5787446-1.

#### 3.6.3. Date Code/Serial Number

#### IE <u>YYWW</u>RR

#### SN SSSSS XXZZAh

IE = Inspired Energy Newberry facility YY = Calendar Year WW = Calendar Week RR = Battery revision SSSSSS = Serial Number XX = the cell supplier ZZAh = the stored energy of the battery in Amp hours



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16


# 3.6.4. Packaging

The batteries are packaged in bulk, in accordance with all applicable transportation regulations.



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16


# 3.6.5. Mechanical Drawing

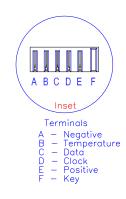



**Battery Specification** 

Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

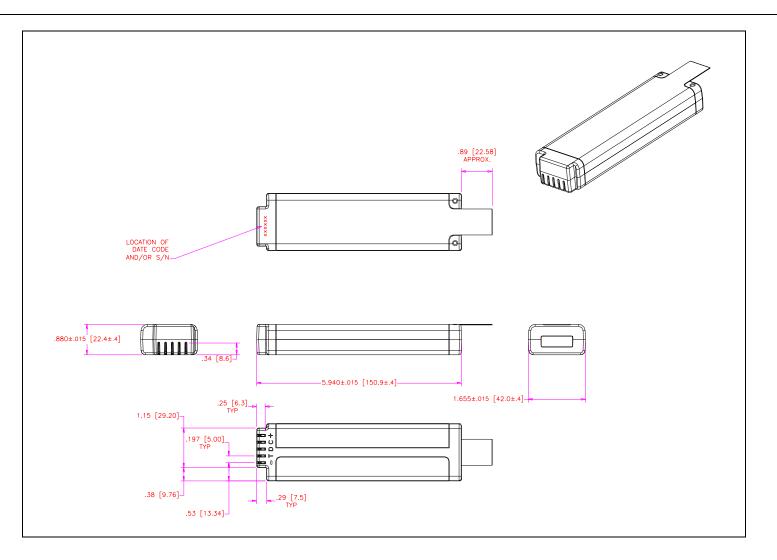

Confidential To Inspired Energy



Specification Number	DSND2034ZD25
Specification Revision	1.1
Prepared By	RAH
Issue date	1/27/16

# 3.7. Environmental/Safety Specifications

# 3.7.1. EMC And Safety

The battery complies with the following:

- EMC Directive 2004/108/EC
- Low Voltage Directive 2006/95/EC
- Battery Recycling Directive 2006/66/EC as amended
- "RoHS" Directive 2011/65/EU

The battery has been tested in accordance with the UN Manual of tests and Criteria part III subsection 38.3 (ST/SG/AC.10/11/Rev.5) - more commonly known as the UN T1-T8 Transportation tests; and has been found to comply with the stated criteria. [USDOT-E7052]

The battery has the following approvals and the pack will be labeled according:

- CE [EN55022:2006 (ITE Class B) & EN55024:1998 (ITE)]
- FCC Part 15 Class B

## 3.8. Reliability

## 3.8.1. Life Expectancy

Given normal storage & usage, user can expect the battery to deliver 1435mAh or more after 300 charge/discharge cycles where the charge phase is CC/CV 1500mA,  $16.8\pm0.05V$  and the discharge is 410mA down to 2.5V/Cell at  $25^{\circ}$ C.

## 3.8.2. Warranty

Inspired Energy maintains a high quality standard. All products are warranted against defects in workmanship, material and construction. The warranty period is one (1) year from the date of shipment from Inspired Energy.

## 3.8.3. Shelf Life

The batteries are shipped from Inspired Energy with between 20% and 30% rated capacity and this provides a minimum of 6 months shelf life, when stored at 25°C. If the storage temperature exceeds 25°C over the 6-month period then the shelf life will be reduced and provisions should be made to recharge the battery periodically.

In order to prevent parasitic drain on the battery, the electronics will go into a shutdown mode if any cell voltage <= 2300mV. If this should happen, the battery pack will require an initial low charge to activate the electronics prior to the implementation of the normal charge. Any SMBus version 1.0, or higher, compatible charger is capable of providing this initial pre-charge.